




# HINGE FITTING INSTRUCTIONS FOR EMERALD TOILET SEAT


241056\_A  
08/2025

## EMERALD PLASTIC BOTTOM FIX HINGE

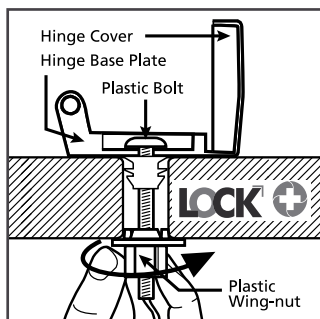


1. Identify the slot in the hinge base plate the hinge bolt should be inserted to ensure the best fit of the seat to the pan.
2. Close hinge cover and ensure both corner catches are fully engaged.
3. Place LOCK+ into holes in the WC pan.
4. Insert hinge bolts through LOCK+.
5. Secure with plastic wing nuts from underside of WC pan until almost finger tight.
6. Adjust seat to required position on WC pan and firmly tighten plastic wing-nuts.


## EMERALD METAL TOP FIX HINGE

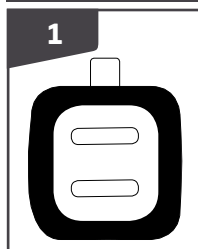


1. Attach rubber gasket to the bottom of each hinge.

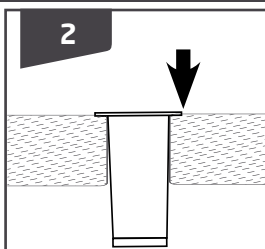

2. Place the rubber sleeves into the holes in the toilet pan. Identify which slot in the base plate the bolt should be put in, to ensure the best fit of the seat to the pan.

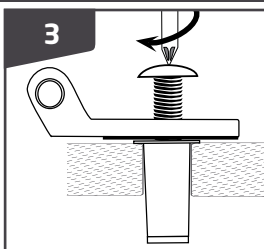

3. Using a suitable screwdriver, tighten the bolt down onto the hinge. Take care to ensure the seat stays in the correct position.

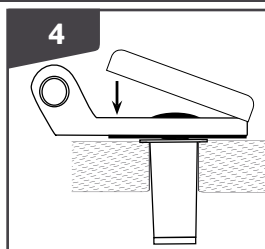

4. After final tightening, place the chrome cover over the hinge base. Make sure it snaps securely into place.

## CARE AND CLEANING



- The seat and cover should be cleaned using warm soapy water.
- **DO NOT** use aggressive or abrasive cleaners as this may scratch the surface of the seat.
- The hinges should be cleaned using soap or mild detergent.
- After cleaning, the hinges should be rinsed in clean water and dried.
- **NEVER** use bleach, concentrated cleaners or acids on the seat or hinges as this will cause discolouring of the seat and hinges.
- **DO NOT** leave bleach in the toilet bowl with the cover closed because it may cause discolouration of the seat and hinges.
- Due to continuing product development, we reserve the right to update and amend technical details without prior notice.
- **DO NOT stand on the seat cover after fitting.**

[www.wirquin.co.uk](http://www.wirquin.co.uk)

Wirquin Ltd - Unit 3, Alpha Court, Capitol Park,  
Thorne, DN8 5TZ - UK  
T: +44(0) 333 222 4488 | Email: [sales@wirquin.co.uk](mailto:sales@wirquin.co.uk)



**wirquin**